


Triton Blue Mini Spot 250 SP

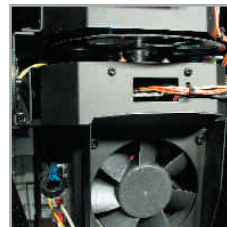

Características

Canales DMX: 11, Conexión DMX 512: XLR 3 Vías.

Pan 360° / Tilt 256°. Alta velocidad en movimiento Pan y Tilt.

Alta velocidad en movimiento Pan y Tilt.

Rueda con 9 colores más blanco, más efecto rainbow.

Rueda de gobos rotativos: 7 gobos más abierto. Diámetro exterior de los gobos: 25 mm, diámetro del imagen de los gobos: 20 mm

Frecuencia de flash / Strobe: 13 Hz.

Programación automática.

Pantalla: dirección digital y configuración de las funciones.

Resét local o remoto.

Interruptor local de encendido y apagado.

Auto test de todas las funciones.

Muestra de cada uno de los valores de los canales DMX.

Almacenamiento de programas: Edición y almacenamiento de programas para incorporar en la EEPROM a través del control en el panel frontal o un controlador externo, puede salvar un máximo de 48 escenas, y ejecutar los programas almacenados con la opción "RUN" del panel frontal.

Alimentación: 230 V/50 hz.


Consumo: 400 W

Dimensiones: 380 x 330 x 450 mm


Peso: 15 Kg.

Fusible: T 4 A, 250 V

Datos fotometricos



Dimensiones

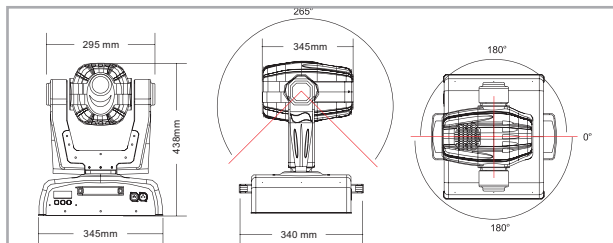

Lista canales

%	1 Color	2 Gobo	3 Gobo Rotation	4 Strobe	5 Pan	6 Tilt	7 Movement Speed	8 Prism Macro	9 FOCUS ZOOM	10 Dimming	11 Internal Program
100%	[Color wheel icon]	[Gobo wheel icon]	[Gobo rotation icon]	[Strobe icon]	[Pan icon]	[Tilt icon]	BLACKOUT BY WIRE CHANGING BLACKOUT BY MOVEMENT	MARCO1 MARCO2 MARCO3 MARCO4 MARCO5 MARCO6 MARCO7	ZOOM1 ZOOM2 ZOOM3 ZOOM4 ZOOM5 ZOOM6 ZOOM7 ZOOM8 ZOOM9 ZOOM10 ZOOM11	[Dimmer icon]	AUTO PROGRAMS OF MUSIC Program 1 Program 2 Program 3 Program 4 Program 5 Program 6 Program 7 Program 8 Program 9 Program 10 Program 11 MOTOR RESET LAMP SWITCH OFF LAMP SWITCH ON COLOUR AN POSITION NORMAL
75%	[Color wheel icon]	[Gobo wheel icon]	[Gobo rotation icon]	[Strobe icon]	[Pan icon]	[Tilt icon]	MAX	[Prism icon]	[Focus/Zoom icon]	[Dimmer icon]	[Program icon]
50%	[Color wheel icon]	[Gobo wheel icon]	[Gobo rotation icon]	[Strobe icon]	[Pan icon]	[Tilt icon]	MIN	[Prism icon]	[Focus/Zoom icon]	[Dimmer icon]	[Program icon]
25%	[Color wheel icon]	[Gobo wheel icon]	[Gobo rotation icon]	[Strobe icon]	[Pan icon]	[Tilt icon]	[Prism icon]	[Focus/Zoom icon]	[Dimmer icon]	[Dimmer icon]	[Program icon]
0%	[Color wheel icon]	[Gobo wheel icon]	[Gobo rotation icon]	[Strobe icon]	[Pan icon]	[Tilt icon]	[Prism icon]	[Focus/Zoom icon]	[Dimmer icon]	[Dimmer icon]	[Program icon]

1 - Rueda de Color	2 - Gobos
3 - Rotación gobos	4 - Strobe
5 - Pan	6 - Tilt
7 - Speed	8 - Macros de prisma
9 - Focus / Zoom	10 - Dimmer
11 - Auto programas	